



SLOW BERRY JUICER

5
YEAR
WARRANTY
ON MOTOR

SUPER POWERFUL
300
WATTS
MOTOR



INSTRUCTION MANUAL WITH WARRANTY CARD

Dear Customer,

Thank you for selecting Rico.

You have just bought yourself one of the finest kitchen help in the form of Rico SLOW JUICER

Your Rico Slow Juicer has been manufactured for you, under the most stringent quality control procedures.

You are assured of the best quality, performance and after sales service. If, however, for any reason, you feel something is lacking, we are always there at your service.

If you require any further assistance, please do not hesitate to contact us, for immediate action on your query/ problem, at:

Customer Relations Department

Rico Appliances Pvt. Ltd.

8th & 9th Floor, Sapphire Bldg, S.V. Road, Khar (W),

Mumbai-400052, Maharashtra, India.

Tel & Whatsapp- (+91) 88794 44877

Email: service@rico.in Website: www.rico.in

Thank you once again for buying Rico.

Mr. Thakur

Chairman,

 
Rico APPLIANCES PVT. LTD.

CONTENTS

Check List / Description.....	3
Technical Specifications	3
Operating Instructions	4
How to Make Ice Cream	4
Important Safety Instructions.....	5
Assembling.....	6
How to make juice.....	8
Troubleshooting.....	12
Warranty Conditions & Service Procedure.....	13

2

Check List / Description

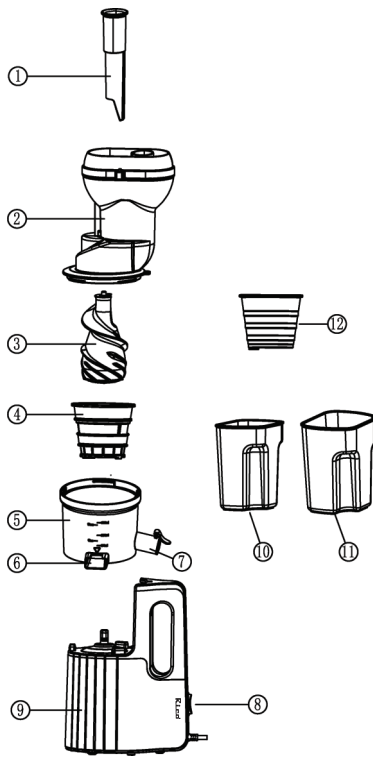

- 1 Pusher
- 2 Hopper / feeding port
- 3 Auger Head
- 4 Stainless Steel Filter
- 5 Bowl
- 6 Pulp ejector
- 7 Juice Spout
- 8 Switch
- 9 Base
- 10 Pulp Cup
- 11 Juice Cup
- 12 Ice Cream Filter

Technical Specification

Input voltage: 220-240V AC

Frequency: 50-60Hz

Power: 300W

Speed: DC motor 46RPM

Max Operation Time: 20min

3

Operating Instructions

Attention:

Turn on the appliance before adding ingredients

Do not operate appliance more than 20min at one time.

1. Plug in appliance.
2. Place cups under pulp ejection and juice spout.
3. Markings on switch: ON/O/REV, see switch button on product.

ON-Starts the motor and juicing process.

O-Switch off appliance.

R-Reverse rotation, only use the function when something is stuck in the bowl and need to be unclogged.

Warning: please do not operate the juicer with wet hands.

How to make Ice Cream

1. To make fresh ice cream, please try to choose some soft fruits as raw materials, such as: banana, mango, strawberry, watermelon, dragon fruit, kiwifruit, etc.;
2. Peel the fruit and cut it into a size not exceeding 25mm×5mm. Then freeze in the freezer for 24 hours or more until the fruit is as hard as ice.
3. Before making ice cream, please take out the frozen fruit and keep it for about 5 minutes. It can be extended in winter.
4. When making ice cream, please turn on the machine first, then put a small amount of frozen fruit into the feeding mouth, meanwhile, add some drinks such as milk and yogurt according to personal taste (if there are many kinds of drinks, you can mix all kinds of drinks before making).
5. The finished ice cream will be discharged from the pulp ejector outlet. Please prepare the container to receive the ice cream in advance.
6. After ice cream is completed, it is necessary to clean the parts as soon as possible. If kept too long, it will not be easy to clean. If it has been kept for too long, soak it in water for a while before cleaning

4

Important Safety Instructions

FOR HOUSEHOLD USE ONLY.

WARNING: when using electrical appliances especially when children are present, basic safety precautions always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instruction carefully before using.
2. To prevent electric shock, do not put the main body into water (because there is a motor),and do not give it to children.
3. Children should be supervised to ensure they do not play with appliance.
4. Do not operate any appliance with damaged cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner, return the appliance to nearest authorized service agent for examination, repair or electrical or mechanical adjustment.
5. If the supply cord is damaged, it must be replaced by manufacturer or its service agent in order to avoid hazard.
6. Always unplug when it is not in use or before assembling or taking off parts or cleaning.
7. Do not touch moving parts
8. Do not use any attachments which is not supplied by manufacturer, otherwise it may lead to fire, electrical shock or other injury.
9. Always ensure to switch off appliance and motor has been stopped completely before disassembling.
10. Do not put your fingers or any other things into the juicer when it is working. If food was been stuck in the inlet, use pusher to push it down or use reverse switch to unstuck. If this manner doesn't help you to solve the problem, then to stop juicer immediately and after ensure the motor is stopped completely to disassemble appliance to move food.
11. Do not use appliance outdoor.
12. Do not use appliance for other intended purpose.
13. Do not use the appliance continuously for more than 20 minutes to avoid damaging the motor. Allow the appliance to cool down for 30 minutes before using it again
14. This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction to use the appliance by a person who is responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
15. Switch off the appliance and unplug from socket before changing accessories or approaching parts that move using.

5

Assembling

Prior to assemble the juicer, please check this point: underneath the bowl, there is a yellow rubber gasket which allows all the juice to only discharge from the juice spout. The rubber gasket is removable, simply grab at one side of the rubber pad and pull out.

The picture 1. shows the rubber gasket is open, the picture 2. shows the rubber gasket is closed.


As shown below:

Attention: the rubber gasket must be closed well or it will leak the juice.

Assemble the bowl onto the base. Put the bowl on the base and rotate clockwise to lock the bowl. Make sure the bowl is always locked on the base tightly. See picture 3.

For the SS filter, the assembling methods are as following picture 1, 2 & 3.

Put the SS filter into the bowl, please note there is a sign ▲ on the filter edge, this sign must align with the same sign ▲ on the edge of base. Correct assembly prevents the filter from rotating in the bowl. See picture 4 & 5.

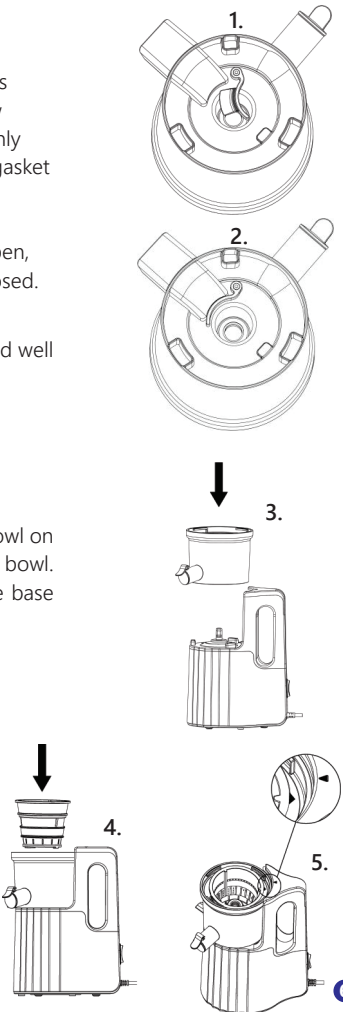


Insert the auger head into the filter, make sure the auger head' axes must be tightly fixed on the base' axes.

See picture 6.

Assemble hopper onto the bowl: Align the convex point of hopper edge with the sign ▲ on the machine and then clockwise rotate the hopper to fix tightly .see picture 7 & 8.

For the Ice Cream filter, the assembling methods are as following.

1. Put the Ice Cream filter into the bowl, please note there is a sign ▲ on the filter edge, this sign must align with the same sign ▲ on the edge of base. Correct assembly prevents the filter from rotating in the bowl. See picture 9 & 10.

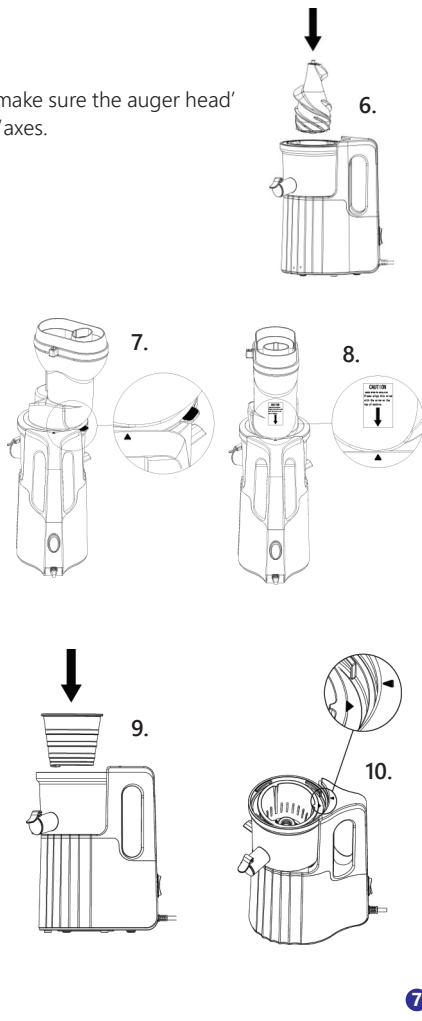

7


How to make juice

In order to ensure the service life of the product and improve the juice efficiency, please operate according to the following methods. If you do not operate according to the following methods, the product may be damaged.

Please allow the juicer to rest for at least 30 minutes before using it again


Food ingredients	Food material treatment	Delivery rate and method (the slower the rate, the better the juice is)	Total amount of food materials input	Total juicing time
Watermelon, dragon fruit and other soft fruits	Peeled and cut into proper size for feeding port	5 seconds, one small one	≤5 kg	≤20min
Mango, peach and other fruits with seeds	The core must be removed and cut into a proper size for feeding port	5 seconds, one small one	≤5 kg	≤20min
Oranges, lemons, pomegranates, etc.	The skin must be removed and cut into a proper size for feeding port	5 seconds, one small one	≤5 kg	≤20min
Apples, pears, etc.	Cut into proper size of feeding port	10 seconds, one small one	≤5 kg	≤20min
Carrot, ginger, celery and other hard or with fiber fruits and vegetables	Carrot: cut into 10 mm * 10 mm long strips; Ginger: cut into 5 mm slices and cut off the fiber; Celery: cut into 30mm pieces and cut off the fiber;	20 seconds, one small one	≤3kg	≤20min
Ingredients that can't be used for juicing		Grains, nuts, sugar cane, etc., very hard ingredients		

8

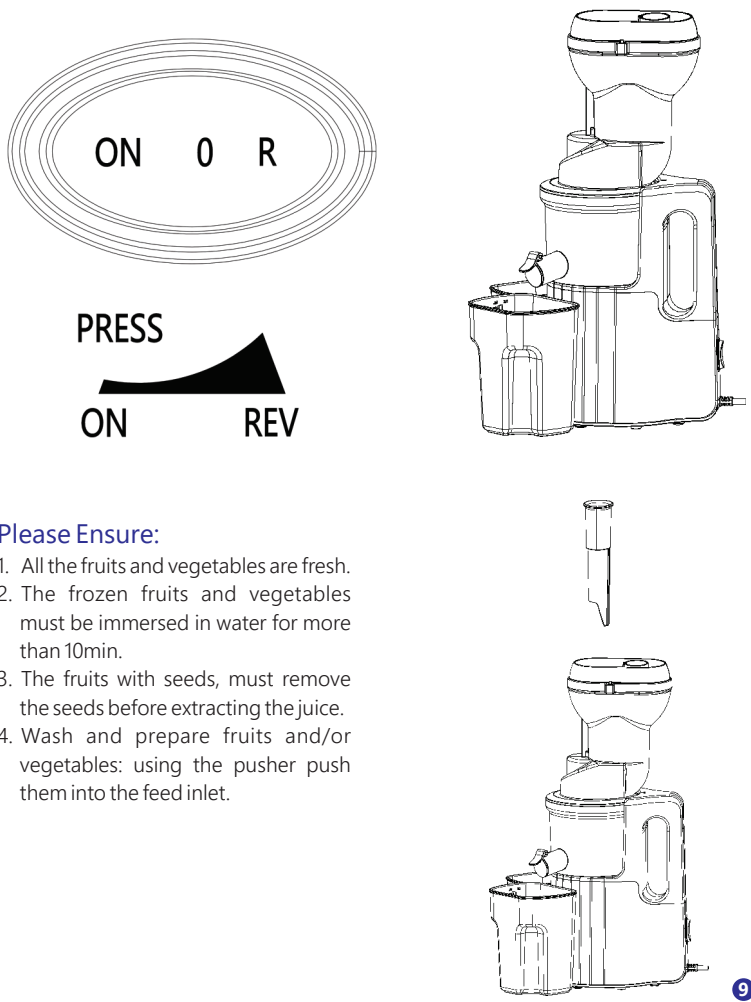


- Please Ensure:**
1. All the fruits and vegetables are fresh.
 2. The frozen fruits and vegetables must be immersed in water for more than 10min.
 3. The fruits with seeds, must remove the seeds before extracting the juice.
 4. Wash and prepare fruits and/or vegetables: using the pusher push them into the feed inlet.

5. Put the cut fruits and vegetables into the feed inlet, unlock the fixed lock, and reverse the feed inlet to put more vegetables.

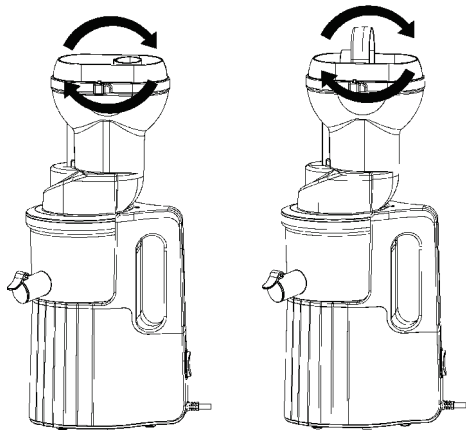

6. The materials are stuck or clogged, press O first, then press R, which can push forward the food that are stuck in the auger head, then press ON, the juicer can be recovered. (repeat operations can be made for several times, but operations can' be made continuously, time interval: 3 seconds)
 - a) It is in R, please use your hand to hold the hopper(in order to prevent the loosening)
 - b) It still doesn't work after the above operations, the hopper may be in a loose way. Please tighten it.
 - c) Regarding the carrot and some hard materials, please slice them before extracting.
 - d) When extracting juice is over, switch it off and unplug from power socket.

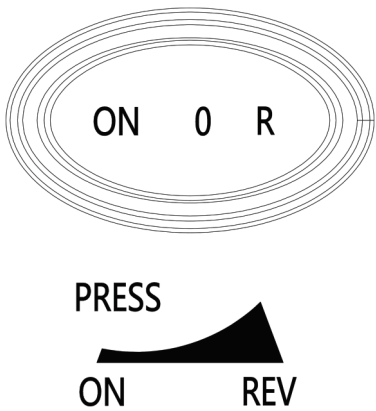

Warning: Do not switch the switch directly from "ON" to "REV" when using the machine, you must switch the switch from "ON" to "O" and then to "REV", and vice versa. Otherwise, the machine will be damaged.

- Disassembling & Cleaning**
1. Ensure the juicer is switched off and the power cord is unplugged.
 2. Remove the pulp cup and juice cup.
 3. As per steps of assembling to be reverse method to disassemble all parts of juicer one by one.
 4. Use brush to clean all parts under water tap.
 5. Use dry cloth to wipe base, make sure do not let any liquid go into the base.
 6. Remove the hopper by turning it to open position.

Problem	Possible Cause	Way
No power to work.	Juicer is not plugged in correctly.	Check the juicer to plug in tightly.
	Hopper not assembled properly	Re-assemble hopper correctly.
Motor is stopped during working.	Bowl is overfill with hard material or too much fiber inside, causing the juicer to get stuck.	Press reverse button to unclog material. If not working, then disassemble hopper to clean material and assemble hopper again. If juicer still not working, stop using and call Rico customer care.
Leakage from beneath of the bowl.	Rubber plug on base of bowl is not inserted correctly.	Disassemble all parts to check rubber plug and plug again correctly.
Stain on the bowl, filter, brush.	Natural color from juice.	This is normal.
Damage filter.	Frozen material, seeds, pips and other hard material in bowl.	Ensure you have read the manual carefully and operate correctly.
Squeaking noise during working.	Juicing noise from squeezing.	This is normal. Ensure you did not over stuff material.
	Some hard material in the bowl.	Stop juicer and disassemble hopper to clean material.

HOME APPLIANCES WARRANTY CARD
WARRANTY CONDITIONS & SERVICE PROCEDURE

If your Rico product become un-operational during the warranty period, kindly contact your nearest authorized Rico Dealer / Service Centre. (List is also available on www.rico.in) or email us on service@rico.in or Tel. & WhatsApp us on +91-8879444877

Please retain this warranty card along with the tax invoice. Both the warranty card & the original purchase invoice are required to claim the warranty, if both are not there, then the warranty will be considered invalid. Additionally, you can register your details in the warranty registration section on our website, www.rico.in.

If you are unable to provide a copy of a valid warranty card and proof of purchase, we will compare the date exactly three months after the manufacture date of the products and the date of the E-warranty card and select the more beneficial of the two to serve as the de-facto purchase date

Your Rico product is warranted against manufacturing defects only for warranty period mentioned on the warranty card from the date of purchase.

Conditions of the Warranty: -
This product is designed for domestic use only. The warranty is not valid if the product is used in a commercial manner.
Repairs during warranty period shall be carried on "Carry In" basis. wherein for service the purchaser shall bring the product to the Service Center with whom the product is registered for warranty service. The warranty does not cover cost of transportation of product from place of installation to the Service Center.

For units installed beyond the municipal limits of the jurisdiction of the company's Authorized Service Centre, it is responsibility of the purchaser to contact the nearest authorized service center and bring the unit to the authorized service center at purchaser's cost and risk.

While carrying out for repair, Rico may use accessories or parts that are new or refurbished or reconditioned. Rico shall not be liable for any loss, cost, expense,

inconvenience or damage that may result from use or inability to use the product. The warranty extended herein is in lieu of all implied conditions and warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss. The warranty in no case shall extend to payment of any monetary consideration whatsoever or the replacement or return of the products as whole, liability for consequential loss or damage is neither accepted nor is implied. This warranty is confined to the repair or replacement of defective parts. Any expenses incurred on collecting and returning the product to the customer and/or on the service personnel who will visit the customer, such as to and from conveyance, incidentals etc., shall be borne by the customer.

The warranty is not valid, if the original serial number has been removed, obliterated, or altered on the product or the product has been modified or repaired by any unauthorized person.

In the event of any unforeseen circumstance, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.

Warranty period mentioned is based on the date recorded during product registration, the actual warranty date will be verified with the purchase invoice date.

- This warranty does not apply to :-**
- The product is not purchased from an Authorized Rico seller.
 - Normal wear and tear of parts
 - The warranty does not cover consumables, plastic, glass or rubber parts, surface coatings, body aesthetics, bulbs, Bakelite parts, rubber/nylon parts, push buttons, non-operational parts and related accessories.
 - The warranty will be void if faults arise due to improper usage, faulty handling, damage during transit, use of spurious parts, neglect, or accidents, as these are not covered in the warranty.
 - Damages resulting from accidents, mishandling or negligence on the part of the customer and fluctuation in supply voltage.

- Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to service centre or to the purchaser's residence.
- The warranty is not valid if the unit is operated at an input voltage or frequency other than specified in the user manual. Any failure due to voltage fluctuations beyond the specified tolerance or damages resulting due to usage of power supply other than specified e.g. inverters, generators wrong adaptor rating etc. will not be covered under warranty.
- Warranty does not cover repairs of any accessory or free gift supplied by dealer/ Rico as promotional scheme, irrespective whether the same has been manufactured by Rico or some one else.
- The warranty is not valid for humming noises caused by the use of electronic fan regulators of any make.
- This warranty is confined to the first purchase of the Rico product and is non-transferrable.

Subject to the above - The defective part will be repaired / replaced free of charge provided that:

- The unit is returned at your cost to our Authorized Service Centre along with the original tax purchase invoice and Warranty Card.
- Where a warranty is provided, the product or part replaced will be the property of Rico.
- The warranty card and details have been registered on our website www.rico.in
- The unit is installed, used and maintained strictly in accordance with the instructions provided.
- The unit is not opened or tampered by anyone except our Authorized Service Centre or technician.
- For any clarification or discrepancies in information, contact customer support via email on service@rico.in or Tel. & WhatsApp us on +91-8879444877.
- This warranty is issued subject to the exclusive jurisdiction of the competent courts in Mumbai INDIA only.
- To avoid unnecessary repairs, please study the instruction manual carefully before operation.



Hi we're giving
60 MONTHS WARRANTY!
on Motor, 1 Year on Product.

(To be retained by the purchaser) Important: Before mailing the warranty card, please read all the terms and conditions of the warranty

DATE OF PURCHASE. __/__/____/

BILL / INVOICE NO.

SELLER'S NAME & ADDRESS / STAMP

CUSTOMER NAME & ADDRESS

STATE / DIST.

COUNTRY

PINCODE

E-MAIL ID

MOBILE



You can also register your warranty online at www.rico.in
(Scan the QR code to go directly to the page). You can also register your warranty by sending a whatsapp of the above warranty card & invoice to (+91) 88794 44877.

Customer Care : Rico Appliances Pvt. Ltd. 8th & 9th Floor, Sapphire Bldg, S.V. Road, Khar (W), Mumbai-400 052. Tel. & Whatsapp : (+91) 88794 44877, Website : www.rico.in, Email : service@rico.in

60 MONTHS WARRANTY